


## QUICK & EASY INSTALLATION:

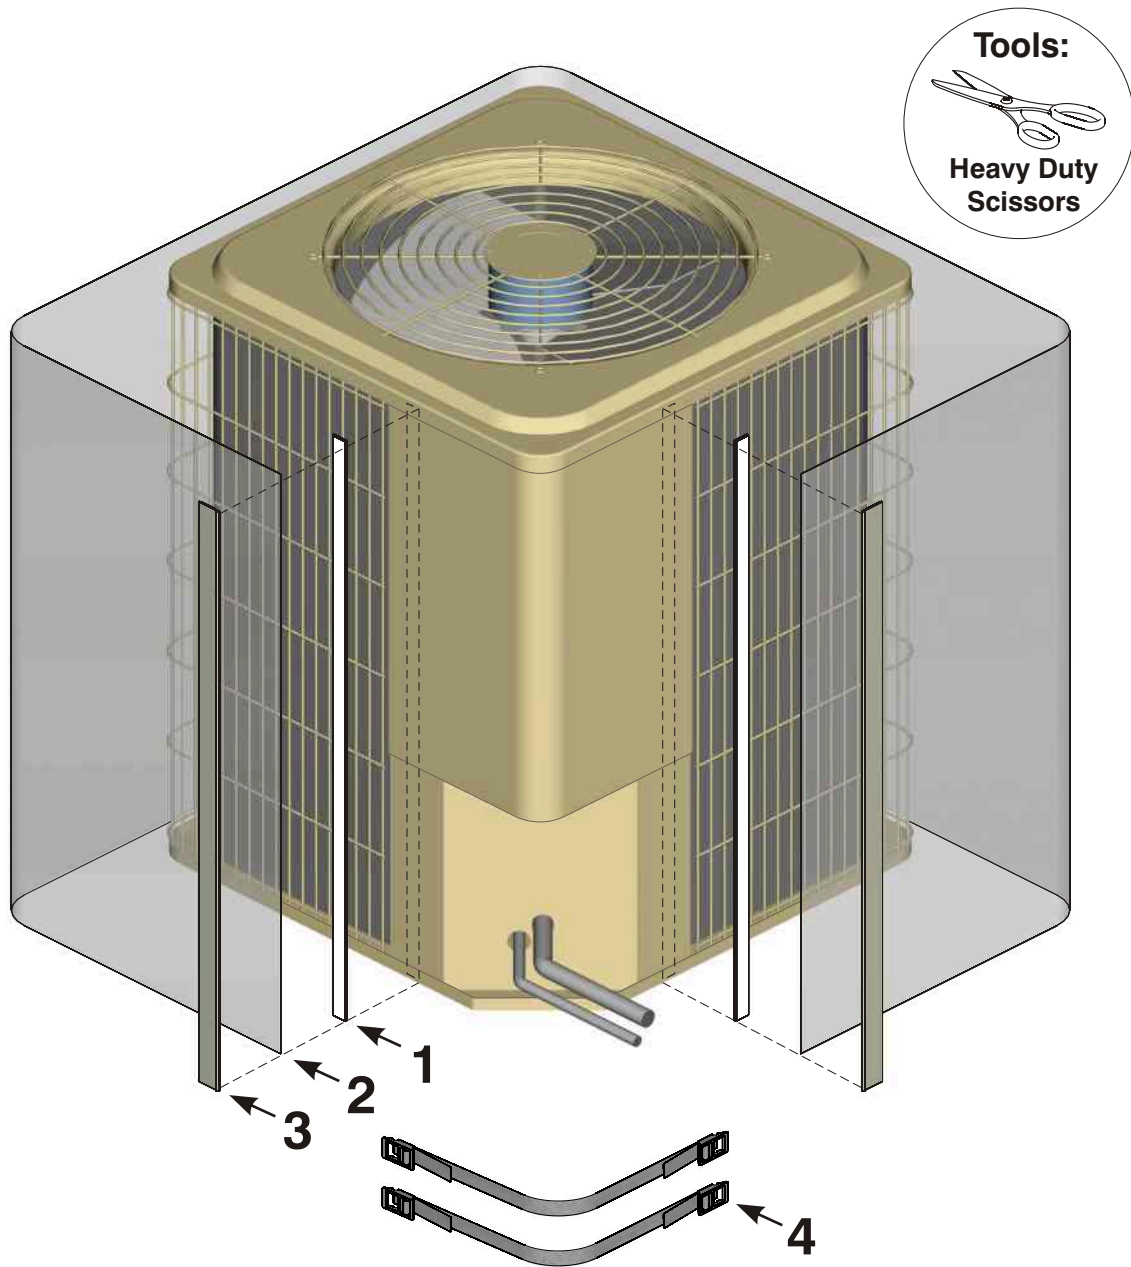

**Step 1:** Cut **magnetic tracks** (1) to height and attach to the condenser. Peel the cover off the adhesive strips.

**Step 2:** Wrap the **filter screen** (2) around condenser. Press screen onto the adhesive strips. Trim off excess.

**Step 3:** Cut **cover tracks** (3) to length then snap them over the magnetic tracks, locking the filter screen between.

**Step 4:** Clip each end of the **security straps** (4) onto the cover tracks. Adjust the strap lengths and trim ends.

**INSTALLATION COMPLETE!**